



MICRO-CLICK Torque Wrench

Dear Customers,


You have purchased a high quality torque wrench from Kamasa Tools

You have a robust precise instrument with a release accuracy of +3% & +5% of the torque setting (ex works).

Please note: every instrument is only as good as the user. Please read and carefully observe the following operation instructions.

Part name

1. Square end drive
2. Two-way direction plate
3. Analogue display
4. Measuring curve
5. Handle and adjustment mechanism
6. Lock button

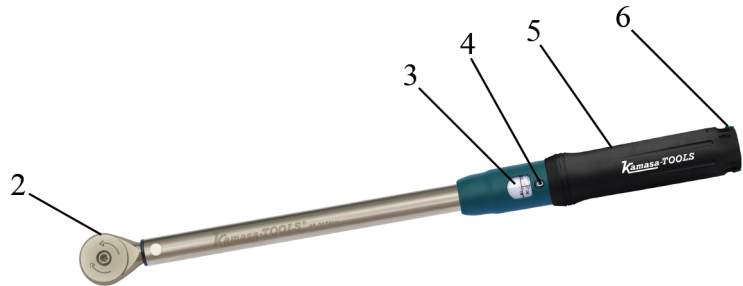

Technical data

Item Number	K2760	K2761	K2762	K2763	K2764
Square end drive	1/4"DR.	3/8"Dr.	1/2"Dr.	1/2"Dr.	3/4"DR.
Torque range (NM)	5-25	20-120	40-210	70-350	140-700
Release accuracy	±3%CW, ±5%CCW (ex work)				

Adjustment of the torque value

Withdraw the lock button (6) at the end of the handle

Set the desired torque on the analogue scale (3) by turning the handle(5)

Press down the lock button- the set value is locked

Working with the MICRO-CLICK

Actuate the torque wrench a few times in the lower torque range when first using the torque wrench or following a lengthy storage period to ensure the mechanism is uniformly lubricated.

Set the desired torque.

Pull slowly and evenly. The set torque is signed by a perceptible jolt and by a simultaneous clicking noise.

The torque function is switched off by repositioning the direction plate (2) between left and right mode.

Once the set torque has been achieved, stop pulling!

Important!

The "MICRO-CLICK is suitable for both right and left hand threads.

To change from right to left operation by turning the direction plate of ratchet.

The torque function is switched off by repositioning the direction plate (2)

This allows the wrench to be used to release bolts.

Note

Only adjust torque wrench using the handle!

Do not use an extension on the handle. This would impair the set value being correctly signaled!

Never set the torque above or below the limit of the scale!

Handle your torque wrench as carefully as you would treat a measurement instrument!

Do not attempt to turn the handle with the lock button locked!

Maintenance and Inspection

Set the torque to the lowest setting following use to relieve stress on the compressive spring.

Only clean the unit using dry materials- do not dip it in petrol or solvent!